


# Seat Slider Lever – Replacement Guide

## Parts Required:

- Lever
- 2 x Side Clip
- 2 x Clip Cover
- 2 x Spring

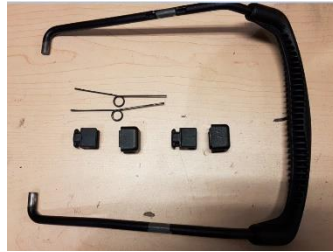

## Instructions:

1. Take off the clip covers using a flathead screwdriver. Pull the lever rod from the side clips.



2. Place the side clip if required, turn clockwise to lock the clip.



3. Place the two springs on both sides of the lever



4. Place the lever on the mechanism, with the handle facing down. Locate the hole for the lever rod and slide the lever into the locking clip.



5. Lock the spring in the slots and place the locking clip cover on top.

