

We at ergoCentric, want to ensure the adjustment features of your chair are easily understood. We believe the proper use of these features is critical and will ensure you receive the full benefits of your ergonomic chair.

Call us if you have any questions and ask for a customer support representative.

ergoCentric®

ph: 1 866 GET ERGO | 905 696 6800

fx: 1 800 848 5190 | 905 696 0899

service@ergocentric.com

ergocentric.com



Association of Canadian Ergonomists
Association Canadienne d'Ergonomie

Printed in Canada.


Adjustability understood™

To get the most out of your chair, please take a minute to learn about its adjustment features.

Read this user guide
or visit ergo6.ca

Task Intensive

ergoCentric®
ergocentric.com

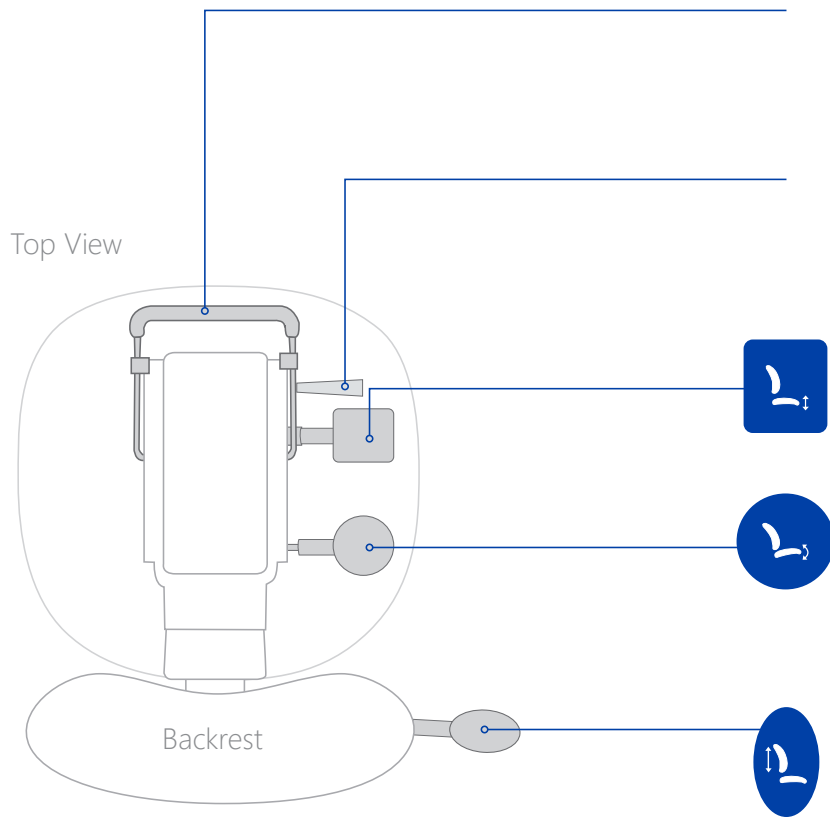

SEAT DEPTH: To adjust the seat depth, pull up on the bar under the front edge of the seat and move the seat forward or backward in relation to the backrest. Release the bar to lock.

SPRING TENSION: To adjust the spring tension, turn the knob located under the front right corner of the seat. Turn the knob clockwise to increase the spring tension and counter-clockwise to decrease the spring tension.

SEAT HEIGHT: To raise the seat, pull up on the **SQUARE** paddle while raising your weight off the chair. To lower the seat, pull up on the paddle while sitting. Release the paddle to lock.

SEAT ANGLE / FREE FLOAT: To adjust the seat angle, pull up on the **CIRCULAR** paddle and shift your weight forward or backward until the seat is at the desired angle. Push this paddle down to lock. To free float the chair, pull this paddle all the way up and leave it in the up position.

BACK HEIGHT: To adjust the back height, push the **OVAL** paddle back away from the seat and adjust the backrest up or down to the desired height. Pull this paddle towards the seat to lock.